



How To Setup ECM-3611 use ATX Power Supply with Fully ATX Functions

When you use ECM-3611 with ATX Power supply and require all the ATX function, please order the cable 1702204500 , and connect one side to ATX POWER SUPPLY.

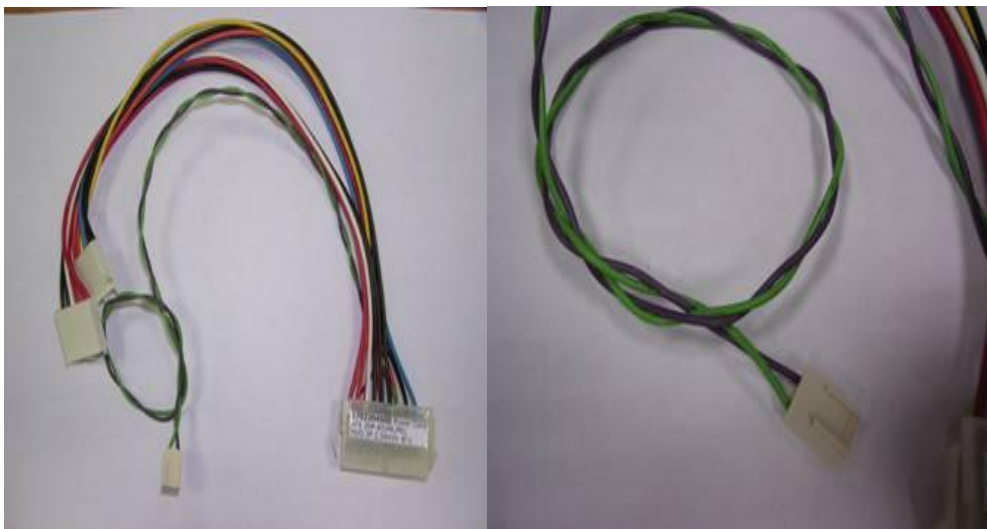





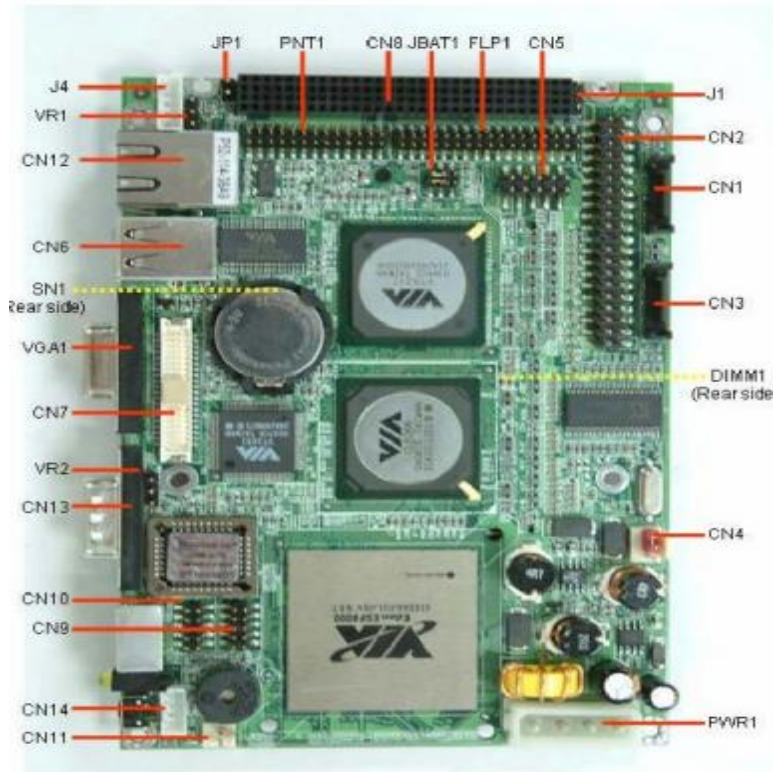

Connect the extra power cable which one contains green wire (PS_ON) and purple wire(VCC_SB) to CN4.(remove CN4 jumper first.)





3.1.2 AT/ATX Power Select (JBAT1)

You can use the AT power supply, set JBAT1 to 1-3 closed, 4-6 closed, CN4 (2-3) closed. Set JBAT1 to 1-3 closed, 2-4 closed, CN4 (OPEN), if ATX power supply is to be used.

AT/ATX Power Select (JBAT1)		
	ATX P/S	AT P/S*
JBAT1	1  2 3  4 5  6	1  2 3  4 5  6

* default

CN4

ATX power connector

JP1

ATX Soft-power bottom

When connect this ATX power cable to CN4 (Pin1 and Pin3) , Please set JBAT1 PIN2-4 CLOSED, and push soft power button for turn on /off board once, then you can use ECM-3611 with fully ATX functions, like push Soft-power button (JP1) to Power-On ECM-3611, and Software Power off ATX Power supply.